Christmas Tree Assembly Instructions and the Art of Shaping

NeumanTree INC.

Pre-lighted using the Brilliant lighting system

Thank you for buying a NeumanTree!

Our pride in workmanship and attention to detail has created the best quality and designed pre-lighted tree

We hope you will enjoy it for years to come!

No unsightly wires dangle from tip to tip

Light cords are attached to the needles with miniature tips

(They hide the wires and hold the lights where you want them)

Reverso en Español (4-5)

⚠ IMPORTANT SAFETY INFORMATION

WARNING

- PLACE THE STAND IN THE LOCATION WHERE YOU WANT YOUR TREE TO BE DISPLAYED. AVOID MOVING THE TREE ONCE IT IS FULLY ASSEMBLED.

- THIS TREE HAS 3 POWER CORDS. THE CORDS ATTACHED TO SECTION (A) AND SECTION (C) MUST PLUG DIRECTLY INTO A POWER STRIP OR THE WALL.

- AS SOON AS YOU NOTICE A BULB HAS BURNED OUT, REPLACE IT IMMEDIATELY. THIS WILL AVOID A RISK OF OVERHEATING AND WILL EXTEND THE OVERALL LIFE OF THE LIGHT SET. (ADDITIONAL SAFETY INFORMATION FOR LIGHT SETS CAN BE FOUND ATTACHED TO THE CORDS OF EACH SECTION OF THE TREE.)

NOTE: MANY SPARE REPLACEMENT BULBS HAVE BEEN INCLUDED WITH YOUR TREE, THEY MAY BE FOUND IN SMALL PLASTIC BAGS ATTACHED TO EACH LIGHT SET WHERE IT PLUGS INTO THE EXTENSION CORD ON THE TRUNK. (WE RECOMMEND LEAVING THEM INTACT SO THEY ARE EASILY AVAILABLE FOR REPLACEMENT.)

ASSEMBLY INSTRUCTIONS

1. REMOVE THE LARGER OF THE 2 TREE STANDS FROM THE PLASTIC BAG AND PULL THE LEGS OPEN FORMING A "+". PLACE THE STAND IN THE LOCATION WHERE YOU WANT YOUR TREE TO BE DISPLAYED.

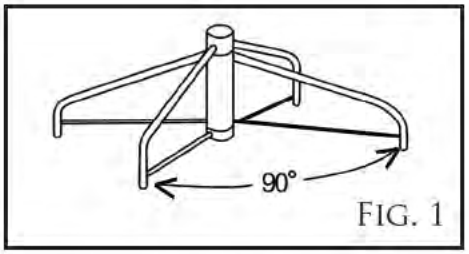

FIG. 1

2. REMOVE ALL OF THE BUBBLE WRAP FROM THE SECTIONS. PLEASE DO NOT USE A KNIFE!

FIG. 2

3. REMOVE THE 3 GREEN PLASTIC POLE PROTECTORS FROM THE END OF POLE SECTIONS (A), (B), AND (C).

FIG. 3

THE ART OF SHAPING

4. Place Bottom section (A) into the stand; then insert and hand tighten the 3 bolts provided.

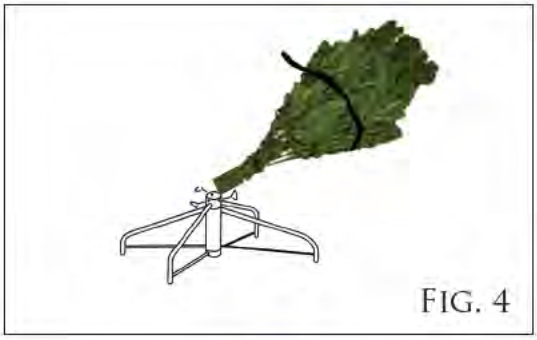

Fig. 4

5. Release the bottom row of branches by untieing the red string.

Note: If this is not the first time you set up your tree, use a cinch strap or cord as shown in fig. 4 and shimmy it up a few inches to release only the bottom row.

Fig. 5

6. Starting at the back of your first branch, fan each needle into a different direction similar to the 9:00 to 3:00 positions on a clock.

Vary often and keep each needle straight. This will give a look of fullness to the tree.

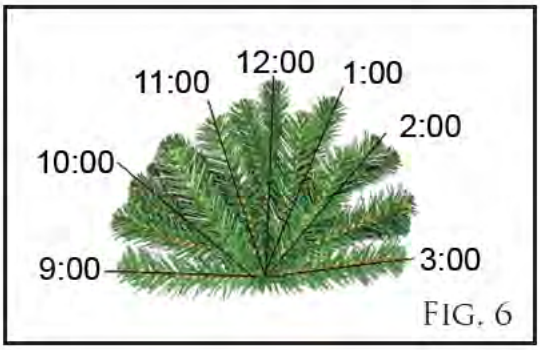

Fig. 6

7. When you arrive at the end of a branch, arrange the needles in the shape of an open hand. If there is a pine cone on that branch, you can center it in the palm.

Fig. 7

8. Shape each branch on the bottom row by repeating the steps illustrated in figures 6 and 7.

Fig. 8

9. Remove the cord from the white box attached to the bottom section (A). Plug it into the wall or a power strip. Repeat the instructions in Figures 5 - 7 for the other rows until the entire section is shaped.

Note: It is recommended to shape while your lights are on to insure they are all plugged in and lit.

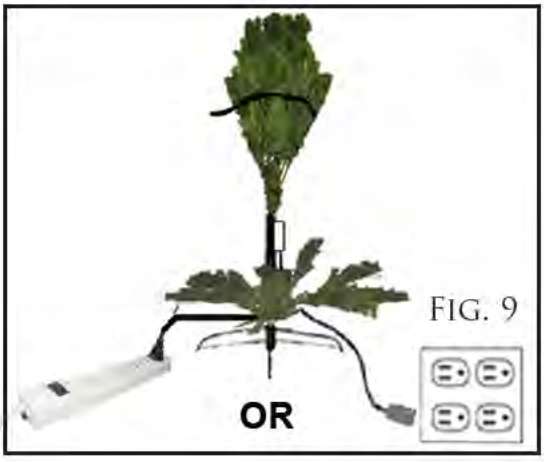

Fig. 9

PLEASE DO NOT LEAVE YOUR TREE UNATTENDED WITH THE LIGHTS ON & THE BRANCHES TIED UP!

10. WITH THE HELP OF THE RED STRINGS OR CINCH STRAP, LIFT AND PLACE SECTION (B) INTO THE BOTTOM SECTION.

FIG. 10

11. REMOVE THE CORD FROM THE WHITE BOX ATTACHED TO SECTION (B). PLUG IT INTO THE TOP RECEPTACLE OF THE EXTENSION CORD ON SECTION (A).

NOTE: THIS CORD IS LONG ENOUGH TO PLUG INTO THE WALL OR A POWER STRIP IF YOU CHOOSE TO SET YOUR TREE UP AS A 7'. (SIMPLY LEAVE OUT SECTION A AND USE THE SMALLER STAND INCLUDED.)

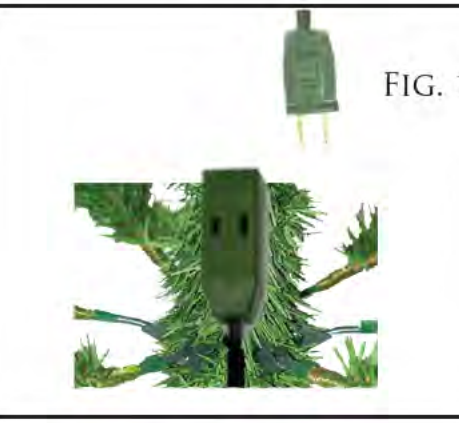

FIG. 11

12. REPEAT THE INSTRUCTION IN FIGURES 5 THROUGH 7 ON PAGE 3 FOR SHAPING EACH ROW OF THIS SECTION.

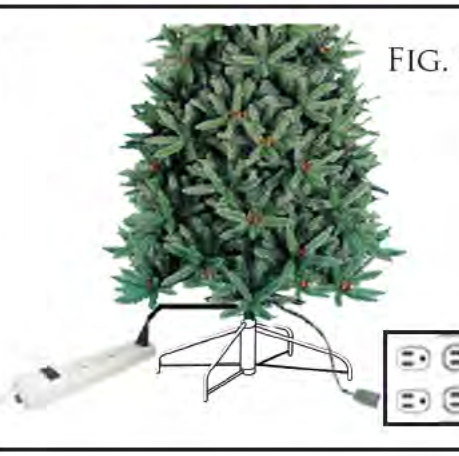

FIG. 12

13. PRIOR TO PLACING THE NEXT SECTION (C) OF BRANCHES INTO THE TREE, WE RECOMMEND SHAPING IT IN THE SMALLER STAND INCLUDED WITH YOUR TREE.

REMOVE THE CORD FROM THE WHITE BOX ATTACHED TO SECTION (C). PLUG IT INTO THE WALL OR A POWER STRIP. REPEAT THE INSTRUCTIONS IN FIGURES 5 THROUGH 7 ON PAGE 3 UNTIL THE ENTIRE SECTION IS SHAPED.

FIG. 13

14. Prior to placing section (C) of branches into the tree, we recommend shaping the Tree top. Gently pull each tip down starting with the bottom row. Pull each needle out straight and then give it a slight curl on the end as if bending towards the sun. It is important to try to keep needles an equal distance from one another. Also the angle from the pole should decrease as you work your way up the top.

Fig. 14

15. Place your Tree top into the top of section (C).

Fig. 15

16. Plug the lights from the Tree top into the top receptacle of the extension cord on section (C).

Fig. 16

17. Carefully lift and place section (C) with the tree top into section (B).

Note: please be sure that the red adapter from the tree stand is not stuck to section (C) prior to placing the section into section (B). If the red insert is not removed, it will not fit!

Once section (C) has been placed into section (B), snake the plug down the tree trunk of sections (B) and (A) and plug it into the wall or a power strip.

Fig. 17

CARE AND MAINTENANCE

• PRIOR TO DISASSEMBLING YOUR TREE IS AN EXCELLENT TIME TO CHECK FOR BULBS WHICH ARE NOT LIT. AS SOON AS YOU NOTICE A BULB HAS BURNED OUT, REPLACE IT. THIS WILL EXTEND THE OVERALL LIFE OF THE LIGHT SET. **DON'T PUT YOUR TREE AWAY HOT!** IT IS BEST TO LET YOUR LIGHTS COOL FOR APPROXIMATELY 30 MINUTES TO INSURE THERE IS NOT DAMAGE TO THE BULBS OR FILAMENTS DURING PACKING.

• WHEN DISASSEMBLING FOR STORAGE, YOU MANY NEED TO GIVE THE UPPERMOST SECTION (C) A SLIGHT TWIST TO DETERMINE WHERE IT CONNECTS TO THE SECTION (B). THEN PULL SECTION (C) AND TREE TOP OFF TOGETHER.

• IF SEPARATING THE SECTIONS PROVES DIFFICULT, APPLY A SMALL AMOUNT OF SPRAY LUBRICANT (SOLD SEPARATELY) AND TRY AGAIN.

• UNPLUG ONLY THE TREE TOP LIGHTS SETS FROM THE EXTENSION CORD ON SECTION (C). KEEP THE OTHER LIGHT SETS PLUGGED TOGETHER. UNPLUG THE THREE EXTENSION CORDS FROM SECTION (A), THE WALL OR POWER STRIP.

• IF YOU WOULD LIKE TO MAINTAIN MOST OF YOUR SHAPING AND SAVE SOME TIME IN PACKING, YOU MAY WANT TO CONSIDER A NEUMANTREE ARTIFICIAL CHRISTMAS TREE STORAGE BAG.

LIMITED WARRANTY

BECAUSE QUALITY IS OUR NUMBER ONE PRIORITY, NEUMANTREE IS PLEASED TO WARRANT THIS PRODUCT AGAINST DEFECTS IN MATERIAL OR WORKMANSHIP AS FOLLOWS:

• FOR A PERIOD OF **10 YEARS** FROM THE DATE OF ORIGINAL PURCHASE, NEUMANTREE WILL, AT NO CHARGE, **REPAIR OR REPLACE ANY DEFECTIVE PARTS OF THIS TREE** (LESS FACTORY INSTALLED LIGHTING).

• FOR A PERIOD OF **4 YEARS** FROM THE DATE OF ORIGINAL PURCHASE, NEUMANTREE WILL, AT NO CHARGE, **REPAIR OR REPLACE ANY DEFECTIVE FACTORY INSTALLED LIGHTS OR LIGHTED SECTIONS OF THIS TREE.**

• THIS WARRANTY DOES NOT COVER DAMAGE RESULTING FROM: ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, NORMAL WEAR OR OUTDOOR USE.

• THIS WARRANTY CANNOT BE TRANSFERRED AND IS VALID ONLY IN THE USA.

TO OBTAIN WARRANTY SERVICE: PLEASE NOTIFY NEUMANTREE VIA U.S. MAIL, FAX OR E-MAIL INDICATING THE NATURE AND DESCRIPTION OF THE DEFECT. WITHIN 10 DAYS OF YOUR CORRESPONDENCE, YOU WILL BE INSTRUCTED AS TO WHICH PART(S) OF THE TREE ARE TO BE RETURNED. ALL TREES OR THEIR PARTS SHIPPED TO THE MANUFACTURER FOR WARRANTY REPAIR OR REPLACEMENT MUST BE SHIPPED **PREPAID.**

NEUMANTREE, INC. • ONE EAST SUPERIOR STREET #510 • CHICAGO, IL. 60611
TOLL FREE (866)865-8733 • FAX (312)440-0835 • EMAIL - SERVICE@NEUMANTREE.COM

A COPY OF YOUR ORIGINAL SALES RECEIPT, CONTAINING THE SELLERS NAME AND THE PRICE PAID MUST ACCOMPANY ANY PART(S) RETURNED FOR REPAIR OR REPLACEMENT.

REPAIR OR REPLACEMENT AS PROVIDED BY THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER AND DOES NOT PLACE THE MANUFACTURER LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.